

INSTALLATION INSTRUCTIONS DECORATIVE WALL PANELS

VERSION WITH ADAPTER

Required tools and materials: assembly glue, neutral silicone, wood saw, hammer, drill, screwdriver, two drills for wood or metal $\varnothing 3$ mm and $\varnothing 6$ mm, and a drill for concrete $\varnothing 6$ mm $\times 3$ mm and $\varnothing 6$ mm for metal and $\varnothing 6$ mm for concrete, screws 3.5×25 mm (6 screws for 1 mounting strip), countersink, dowels with a screw adapted to the type of ground of 6 mm thickness (6 pcs for 1 adapter).

Set includes: Mounting strip – guide rail (3 bare pieces), decorative strip (3 pieces), adapter (1 piece), end strip (1 piece).

Note: the nominal length of the elements is 2800 mm, the working length is 2750 mm, therefore losses of laminate or damages to the ends not longer than 50 mm do not constitute a defect.

Before installation

Read the installation instructions before starting the installation.


Carry out the work in accordance with safety and construction regulations.

We recommend to entrust the works to persons experienced in construction works.

Fastening the adapter


1. Check that the product conforms to the order (do not install a damaged product or one that does not conform to the order otherwise the Warranty protection will be forfeited).
2. Use a spirit level with a minimum length of 2 metres to check the verticality of the wall.
3. Measure the required length and shorten the adapter to the desired height by cutting the trim on both sides.
4. Apply mounting glue to the not taped surface of the adapter.
5. Fit the adapter to the wall, making sure it sticks evenly to the wall.
6. Drill dowel holes in the adapter recess with a 6 mm drill and use a countersink to countersink the flange.
7. Drill holes in the masonry using a 6 mm dia. concrete drill bit and insert the 6 mm dia. dowels into the prepared holes. Mount the screws that will additionally fix the adapter to the wall (Figure - Fixing to the wall). Caution: the screw must be flush with the recess of the adapter.
8. Connect the adapters in series or on a corner according to the diagram below.

NOTE: Correct installation of the first adapter influences the flawless fixing of the subsequent elements.

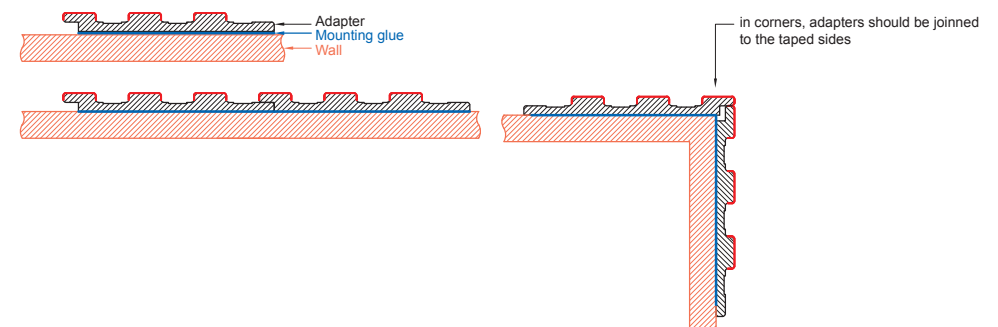


Fixing the mounting strip (guide rail)


1. Measure the required length and shorten the battens to the desired height by cutting them on both sides (two ends).
2. Make 3 holes at regular intervals for the screws using a 3mm diam. drill and countersink the holes for the head of the screw.
3. Apply glue along the entire length of the guide rail.
4. Place the guide rail in the adapter recess.
5. Mount the 3.5x25mm screws in the prepared holes.

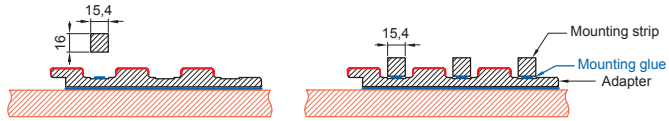

Mounting strip, borehole

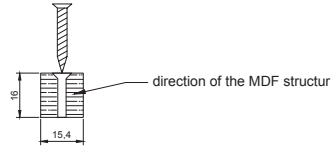


Fixing the mounting strip

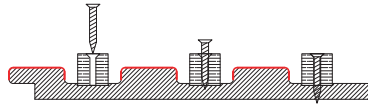


Fixing the decorative strip

1. Measure the required length and shorten the mouldings to the desired height by cutting them on both sides.
2. Apply mounting glue to the internal edges of the moulding according to the diagram below.
3. Place the decorative strip on the mounting strip.

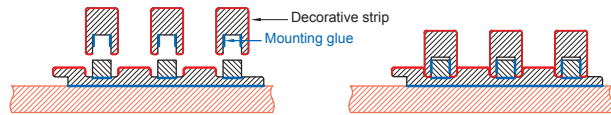


Fixing the end strip

1. The purpose of the strip is to cover the bare part of the adapter.
2. Measure the required length and shorten the strip to the desired height.
3. Apply glue to the bare surface of the end strip according to the diagram below.
4. Attach the strip to the adaptor.
5. Fix the strip on the other side (optional for serial and obligatory for corner joints).
6. We recommend that you protect the joint between the decorative panels and the floor against moisture with a neutral silicone.

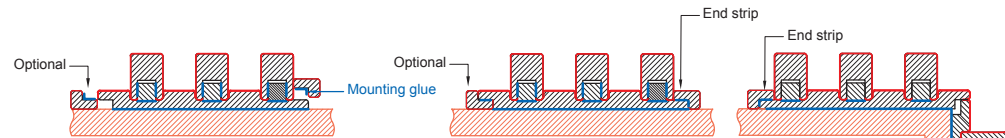

Fixing to masonry

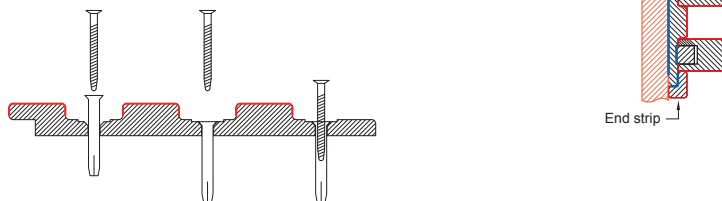

VERSION WITHOUT ADAPTER

Required tools and materials: assembly glue, neutral silicone, a wood saw, a hammer, a drill, a screwdriver, a drill with a diameter of fi 6 mm, dowel pins 6 x 40 mm (6 pcs for 1 mounting strip).

Set includes: Mounting strip-guide rail (3 bare pieces), decorative strip (3 pieces)


Note: the nominal length of the elements is 2800 mm, the working length is 2750 mm, therefore losses of laminate or damages to the ends not longer than 50 mm do not constitute a defect

Before installation

Read the installation instructions before starting the installation.
Carry out the work in accordance with safety and construction regulations.
We recommend to entrust the works to persons experienced in construction works.

Fixing the mounting strip (guide rail)


1. Measure the required length and shorten the battens to the desired height by cutting them on both sides (two ends).
2. Make 3 holes at regular intervals for the dowels using a drill with a diameter of 6mm and countersink the holes for the head of the screw.
3. Apply glue along the entire length of the strip.
4. Place the prepared mounting strip in the designated place, checking its adherence to the wall and its vertical position.
5. Mount the 6 x 40mm dowel pins in the prepared holes. Caution: the screw must be flush with the surface of the mounting strip (picture).

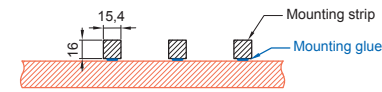

* before proceeding to step 1, determine the distances between the mounting strips

Fixing the decorative strip

1. Measure the required length and shorten the mouldings to the desired height by cutting them on both sides.
2. Apply mounting glue to the internal edges of the moulding according to the diagram below.
3. Place the decorative strip on the mounting strip.
4. We recommend securing the joint between the decorative panels and the floor against moisture with a neutral silicone.

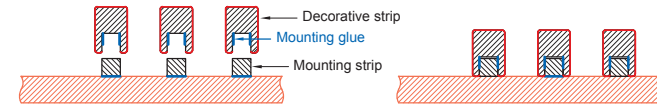

Set Weight:

1. Adapter (1 pc.) + Mounting strip (3 pc.) + Decorative strip (3 pc.) + End strip (2 pc.) = 13kg
2. Mounting strip (1 pc.) + Decorative strip (1 pc.) = 2,5kg

for a length of 2800 mm

Legend

